
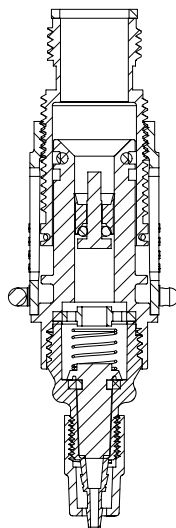


# Lower end injector & wear parts kits 2%:

Kit A - Wear Parts Kit (Dosage Piston, Lower Shaft, O-rings)	093250	14, 17, 44, 52
Kit C - Wear Parts Kit (Kit A, O-ring, Inner Cylinder)	093251	12, 14, 17, 37, 44, 52
Kit D - Wear Parts Kit (Fitting, Poppet, Seal, Spring)	093252	10, 11, 13, 89
Kit E - Wear Parts Kit (Kit C & D, Gasket)	093253	10, 11, 12, 13, 14, 16, 17, 37, 44, 52, 89
Kit G - Lower End Complete (Kit E, Outer Cylinder, Ratio Adjuster, Hose, Suction Tube Strainer, O-rings, Cotter Ring, Pins, Nuts, Wrench)	093254	7, 10, 11, 12, 13, 14, 16, 17, 25, 27, 34, 37, 44, 52, 60, 61, 71, 79, 89
Kit H - Motor Piston Assembly Kit	093110	9

Manual Reference	Part #	Description
7	190620	Outer Cylinder
10	195877	Spring
11	190202	Suction Tube Fitting
12	212009V	O-ring
13	011453A	Check Poppet w/ Washer
14	212105 *Must specify material	O-ring
16	193017S	Lower End Gasket
25	011023	Hose 1/8"ID x 3'L
27	190834	Dip Tube Strainer
34	193641	Cotter Ring
37	190812	Inner Cylinder
44	193009	Dosage Piston
52	193022	Lower Shaft
60	212517W	O-ring
61	193731	Ratio Adjuster
71	193854	Hose Nut
79	193650	Interlock Pin
89	193054	Gasket

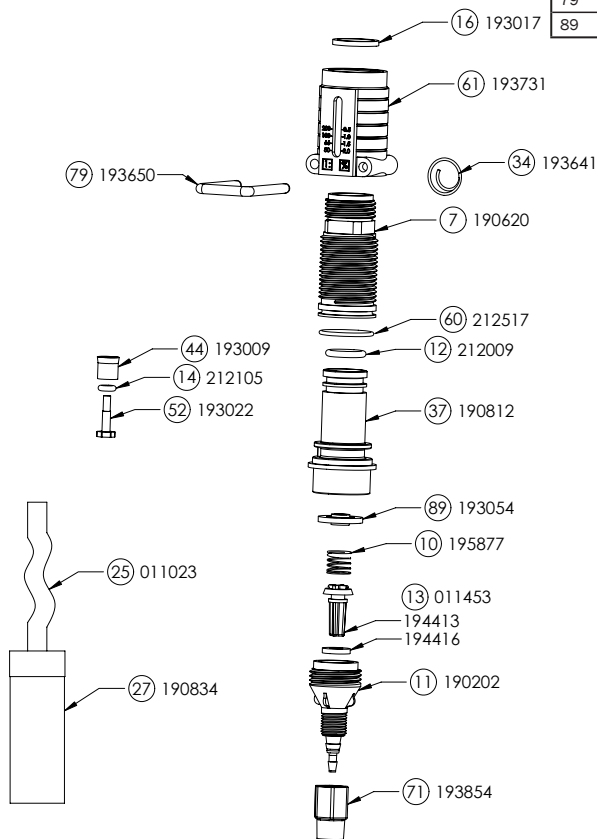

**Lower End Assembly**