

Lower end injector & wear parts kits 5%:

Kit A - Wear Parts Kit (Shaft Assy., O-ring)	093260	17, 52
Kit C - Wear Parts Kit (Kit A, O-ring, Inner Cylinder)	093261	12, 17, 37, 52
Kit D - Wear Parts Kit (Check Poppet Assy., Seal, Spring)	093262	10, 11, 13, 89
Kit E - Wear Parts Kit (Poppet, Shaft, Fitting, Gasket, Seal, Inner Cylinder, Spring, O-rings)	093263	10, 11, 12, 13, 16, 17, 37, 52, 89
Kit G - Lower End Complete (Kit E, Outer Cylinder, Ratio Adjuster, O-rings, Cotter Ring, Pins, Spring, Seal, Nut)	093264	7, 10, 11, 12, 13, 16, 17, 25, 27, 34, 37, 52, 60, 61, 71, 79, 89
Kit H - Motor Piston Assembly Kit	093101	9

Manual Reference	Part #	Description
7	190620	Outer Cylinder
10	194418H	Spring
11	190201	Suction Fitting 1/4"
12	212009 *Must specify material	O-ring
13	011453A	Check Poppet
16	193017S	Lower End Gasket
25	010026	Hose 1/4"ID x 3' L
27	102834	Dip Tube Strainer
34	193641	Cotter Ring
37	193810	Inner Cylinder
52	093106	Shaft Assembly
60	212517W	O-ring
61	193732	Ratio Adjuster
71	190854	Hose nut
79	193650	Interlock Pin
89	193054	Gasket

